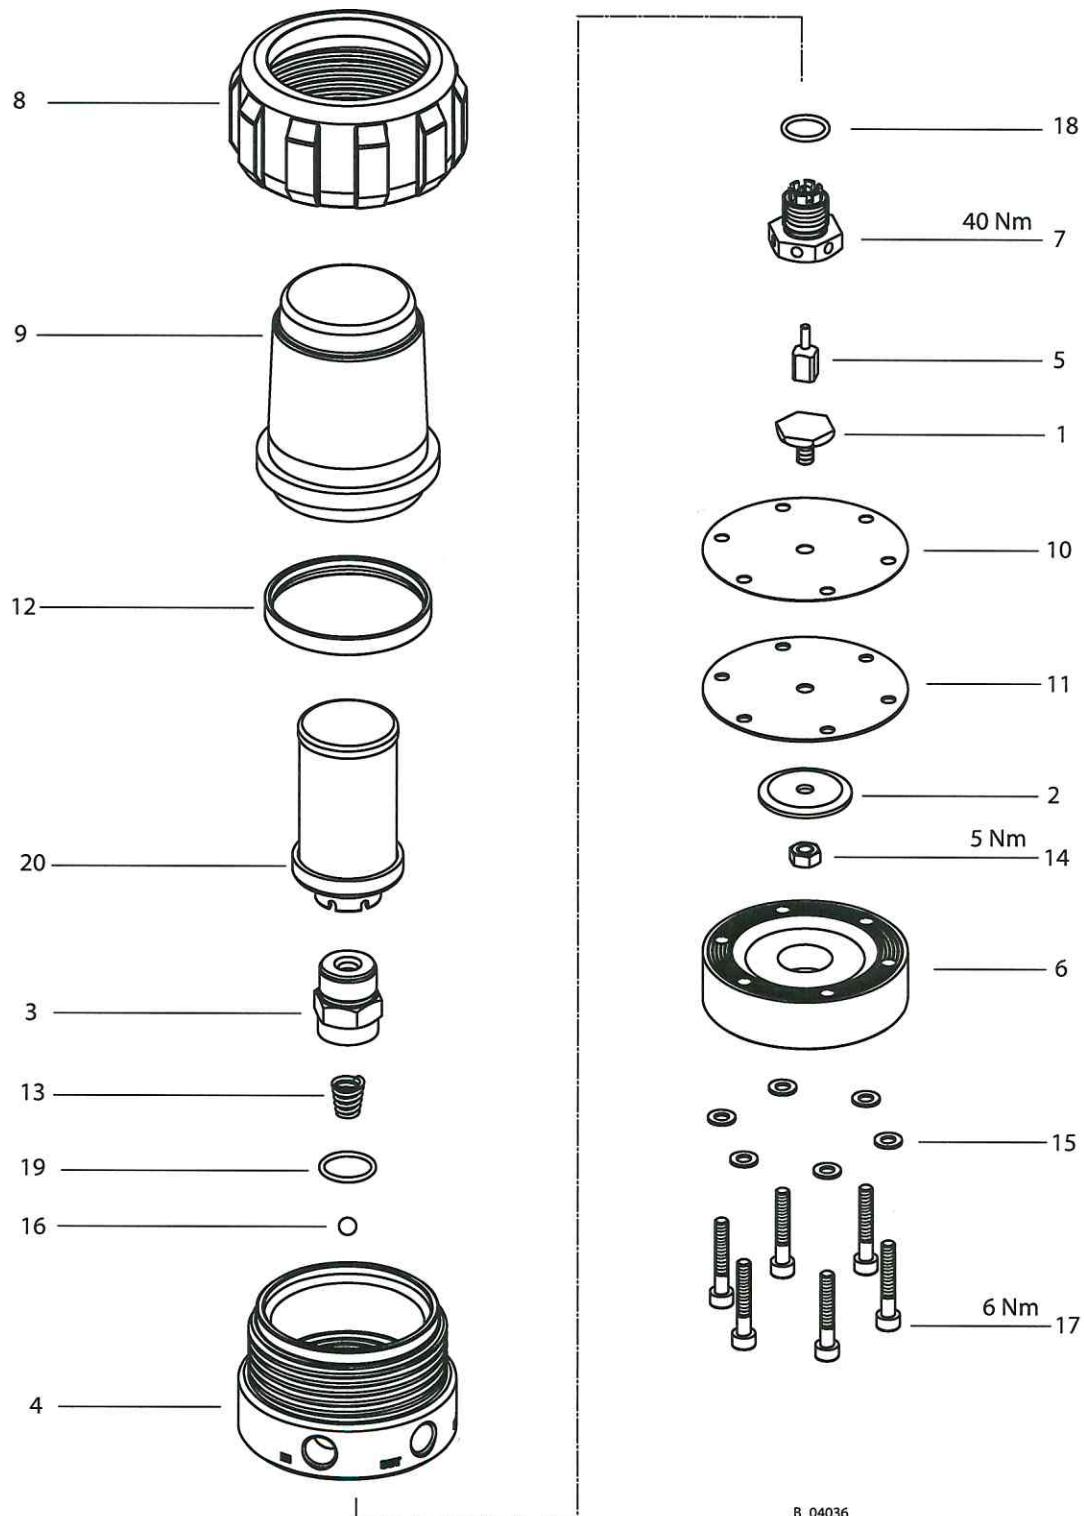


11.8 FINE FLOW CONTROLLER

B_04036

Fine Flow Controller

		T0180.00A	T0180.00AI		
Pos	K	Stk	Order No.	Order No.	Description
		1	T0180.00A	T0180.00AI	Fine Flow Controller, 14/0.5-8 bar
1		1	A588.03	A588.03	Diaphragm disc - material side
2		1	A590.03	A590.03	Diaphragm disc - air side
3		1	B0172.03	B0172.03	Ball guide
4		1	B0180.01	B0180.03	Housing - material side
5	◆ ★	1	B391.03	B391.03	Shut-off needle
6		1	B563.01	B563.01	Housing - air side
7	◆ ★	1	T6007.00A	T6007.00A	Ball seat body, complete
8		1	F991.07	F991.07	Union nut
9		1	F992.07	F992.07	Filter cup
10	◆ ★ ▲	1	G725.05	G725.05	RVO PTFE Diaphragm
11	◆ ★ ▲	1	G726.06	G726.06	RVO Diaphragm
12	◆ ★ ▲	1	G640.05B	G640.05B	Seal
13	◆ ★	1	H285.03	H285.03	Conical spring
14		1	K311.62	K311.62	Self-locking nut, M6
15		6	K515.62	K515.62	Plain washer
16	◆ ★ ▲	1	K811.03	K811.03	Ball, 1/4"
17		6	K1055.62	K1055.62	Screw, M5x30
18	◆ ★ ▲	1	L148.06	L148.06	O-ring
19	◆ ★ ▲	1	L118.06A	L118.06A	O-ring
20	◆	1	T500.00A	T500.00A	Filter insert, 100 mesh, white
20	◆	1	T500.00	T500.00	Filter insert, 60 mesh, black
20	◆	1	T500.00B	T500.00B	Filter insert, 150 mesh
			T6193.00	T6193.00	FFC-Service set
			T6193.00	T6193.00	FFC-Sealing set

◆ Wearing part

★ included in FFC-Service set

▲ included in FFC-Sealing set