

OPERATING INSTRUCTIONS Material Pressure Vessel Type MDG



Fabrication number: 160311



®

WALTHER

Spritz- und Lackiersysteme GmbH

Kärntner Str. 18-30

D-42327 Wuppertal-Vohwinkel (F.R. of Germany)

Telefon: +49 (0)202/787-0 • Telefax: +49 (0)202/787-217

Internet: www.walther-pilot.de • Mail: info@walther-pilot.de



CONTENTS:

1.	Declaration of Conformity / Declaration of the Manufacturer	3
2.	Technical Data.....	4
3.	Rules and Regulations for the Use of Pressure Tanks	5
4.	Functional Description.....	6
5.	Instructions.....	6
6.	Device specific instructions.....	7
7.	Proper Use	8
8.	Improper Use.....	8
9.	Pressure Device use in explosion-hazardous zones.....	8
10.	Installing the Pressure Tank	9
11.	Using the Pressure Tank	9
12.	Cleaning the Tank.....	10
13.	Maintenance and Inspection	11
14.	Overhaul / Refitting / Replacement of Major Components	11
15.	Possible Faults and Their Correction	12
16.	Warranty.....	12
17.	Drawing(s).....	13
18.	Appendix.....	14

1. **DECLARATION OF CONFORMITY / DECLARATION OF THE MANUFACTURER**

EU DECLARATION OF CONFORMITY



We, the manufacturers of the equipment, hereby declare under our sole responsibility that the product(s) described below conform to the requirements of the Pressure Equipment Directive 2014/68/EC. This declaration will be rendered invalid if any changes are made to the equipment without prior consultation with us.

Markings on the Equipment:			
Manufacturer/Supplier	: Walther Spritz- und Lackiersysteme GmbH, D-42327 Wuppertal		
Part Number	: V4424160013		
Type Designation	: MDG 45		
Fabrication Number	: 160311	Date of Manufacture	: 2018
Assembly Drawing	: 44-0000-3123 f		
Intended purpose	: Material pressure vessel		
Components: (Name / Description / Drawing No.)			
Material pressure vessel	Typ MDG 45 6 b. VA	44-0060-3012 k	
Filling closure	DN 55 PN 10 VA	44-1111-3020 a	
Air inlet fitting	Typ 35-400 Solo-Rgl.	44-0000-4452	
Upper material outlet	1x 3/8" VA (MDG 8-500/LDG 20)	44-0000-4483	
Applied Standards and Directives:			
Directive 2014/68/EU (Pressure Equipment Directive) AD-2000 Rules			
Specification acc. PED 2014/68/EC			
Scope of the Assessment	: Assembly (PED 2014/68/EU Article 4 Section (2) b))		
PED category	: CIII	Conformity assessment procedure	: H
Accreditation:			
Notified Body Monitoring the QA	TÜV NORD Systems GmbH & Co. KG D-22525 Hamburg		
System:	Code-No.:	0045	Certificate-No.: 07/202/1405/Z/2740/17/D
Design Examinations:			
Drawing No.	Inspection Agent:	Identification No.	Insp.-Date
44-0000-3123	Self-examination	WP 3123/2	15.05.2002
44-0060-3012	Self-examination	WP 3012/1	27.03.2002
44-1111-3020	TÜV Nord Systems GmbH, 45032 Essen	STK2 P 1254 17 D 0328	05.07.2017
Approval and Inspections:			
Batch/Insp. No.:	11426		
Quality Control Production:	Self-examination		
	Code-No.:	---	Certificate-No.: ---
Date of Pressure Test:	02.03.2018		
Date of Final Inspection:	10.04.2018		
Certificates of material-tests are held by the manufacturer.			

D-57290 Neunkirchen-Struthütten, 10.04.2018

Andreas Leike

Alexander Merten

WALTHER Spritz- und Lackiersysteme GmbH - Im Wiesengrund 28 - D-57290 Neunkirchen-Struthütten

Diese Erklärung ist keine Zusicherung von Eigenschaften im Sinne der Produkthaftung. Die Sicherheitshinweise der Produktdokumentation sind zu beachten.

This Declaration does not give assurance of properties within the meaning of product liability. The safety instructions provided in the product documentaion must be observed.

OM-Formular 21/11 en / Revision 4 (02/2018) / erst.: BL-S

2. TECHNICAL DATA

Type designation:	MDG 45
Specified use:	Material pressure vessel
Assembly drawing:	44-0000-3123 f
Tank materials:	1.4301/FPM
Category and method for compatibility evaluation as per directive 2014/68/EU (Pressure Equipment Directive):	CIII / Modul H
Indication as per directive 2014/34/EU (Directive Atex):	

Operating Data:	Inside space	
Design pressure: (bar)	6,0	
Permissible operating pressure: ① (bar)	6,0	
Test pressure: (bar)	8,6	
Safety valve set pressure: (bar)	6,0	
Safety valve inspection number:	CE0685 9150/10 DN8 A50 6,0	
Max. input pressure (pressure regulator): (bar)	16,0	
Min. permissible operating temperature: (°C.)	+10	
Max. permissible operating temperature: (°C.)	+50	
Internal volume: (lit.)	48,0	
Usable volume (max.): ② (lit.)	42,8	
Filling mass (max.): (kg)	no data	
Corrosion allowance: (mm)	0	
Material/operating medium:	Fluid group 1	

① The pressure device is designed for ≤ 1000 variations of load between lack of pressure state and the admissible working pressure and/or deviations in the pressure $< 10\%$ of the admissible working pressure. Depending on the application a different number of the admissible operations for variation of load as per AD2000 data sheet S1 can be specified.

② The usable volume refers to the stationary use of the pressure tank. This value does not include any reduction in volume due to internal fittings and/or the use of internal containers (e.g. cans or insert buckets). Depending on the operating conditions, the usable volume must be reduced by the operator if necessary in order to avoid damage to the fittings and internal parts (air inlet, safety devices, agitators, etc.) caused by penetration by the operating-medium.

3. RULES AND REGULATIONS FOR THE USE OF PRESSURE TANKS

The following information applies only to pressure tanks within the scope of the Pressure Equipment Directive 2014/68/EU. Material pressure tanks that fall below the limit values of Category 1 ("C0", product of pressure PS and volume V lower than 25 bar L) are not covered by the Directive.

From 01.01.2003, the operation of pressure equipment is regulated by the German Regulations on Industrial Safety (Betriebssicherheitsverordnung - BetrSichV). Furthermore, operators must observe and comply with all safety regulations and other rules and regulations relevant for the specific application as well as for the place of use, in particular those regulations imposed by trade and industry law, transport law and water protection law. Before the pressure tank is used for the first time, the operator must contact an authorised inspection agency ("notified body") approved to supervise pressure equipment of the corresponding category in order to determine the rules and regulations covering the specific application and to coordinate further procedures.

The rules and regulations on the use of pressure equipment are very extensive. The following information represents only an excerpt of the rules that must be observed by the operator.

The pressure tank has been designed, approved and marked by the manufacturer in accordance with the EU Pressure Equipment Directive 2014/68/EU and the German regulations on pressure equipment (14. GSGV). The category in which the equipment is classified, the scope of the assessment (vessel or assembly) and the applied conformity assessment module can be found in the Section *Technical Data* and in the *Declaration of Conformity*.

All pressure equipment within the scope of the Pressure Equipment Directive is subject to surveillance in accordance with legislation governing the safety of equipment and industrial safety (e.g. German Regulations on Industrial Safety - BetrSichV).

Any person using equipment within the scope of the Regulations on Industrial Safety (BetrSichV) is required to perform an assessment of the dangers involved in using the equipment and to determine the measures necessary to ensure the safe installation and operation of the equipment. In particular, this includes those dangers relating to the operation of the equipment itself as well as any dangers at the workplace resulting from interaction with other equipment or with working materials or with the working environment.

Any person using pressure equipment is required to keep the equipment in an orderly condition, to operate the equipment in accordance with the rules and regulations, to monitor the condition of the equipment, to perform any necessary maintenance work without delay and to ensure that all the relevant safety measures relating to the specific application have been taken. If the equipment is found to have defects that might endanger its safe operation, it must be taken out of operation immediately.

Pressure equipment is subject to prescribed tests before being put into operation, during operation and after any refitting or maintenance work has been carried out.

3.1 Inspection Agencies

Pressure equipment classified in Categories CI + CII or in Categories CIII + CIV (provided that the max. allowable pressure PS is not more than 1 bar) may be inspected by a qualified person. In all other cases, inspection of the

pressure equipment must be performed by an authorised inspection agency ("notified body").

3.2 Inspection Before First Use

The pressure tank may be used for the first time only after it has been inspected by an approved inspection agency and has been judged to be in an orderly condition with regard to its assembly, installation, mounting conditions and safe operation.

3.3 Recurrent Inspections

The pressure equipment must be periodically monitored by the inspection agency at specified intervals to ensure that it is in an orderly condition. These inspections consist of internal inspections and strength tests. The scope and intervals of these recurrent inspections are stipulated in § 15 BetrSichV.

Unless otherwise stipulated in § 15 BetrSichV, internal inspections must be carried out by the inspection agency as soon as half the number of loadings specified in the Section *Technical Data* have been reached, or at the latest every 5 years, and strength tests must be performed at the latest every 10 years. It is the responsibility of the operator to record the number of loadings in a suitable manner and to inform the inspection agency as soon as an inspection is necessary.

If the operating conditions at the place of application deviate from those that were assumed when the inspection intervals and permissible number of loadings were specified, or if severe operating conditions (corrosion, abrasion, dirt contamination, unfavourable environmental influences, etc.) are likely to cause damage or impair the function of the equipment even before the end of the normal inspection interval, the operator must reduce the inspection intervals in consultation with the notified body insofar as this is in the interests of the safety of employees or third parties.

If the thickness of the pressure-bearing walls of the tank falls below the minimum permissible wall thickness (material thickness as specified in the drawings minus the corrosion allowance), the pressure tank must be taken out of operation immediately.

3.4 Inspection in Special Cases

If the pressure tank has been modified in any way, it must not be put into operation again until it has been checked by the notified body and its operation found to be fault-free, insofar as it is influenced by the modification

As soon as the specified number of loadings has been reached, the operator must contact the notified body to coordinate further procedures.

If the allowable operating parameters (maximum allowable operating pressure, maximum allowable operating temperature) have been exceeded due to the specific application or as a result of external influences, or if the values have fallen below the minimum levels, the pressure tank must not be put into operation again until it has been checked by the notified body and has been found to be in a fault-free condition. This also applies if the tank has been exposed to fire.

3.5 Rules and Regulations on Using the Pressure Tank Outside Germany

If the pressure tank is used outside Germany, the operator must observe and apply the rules and regulations valid in the respective country in addition to those set out in these Operating Instructions. If the regulations in the respective country call for measures that go beyond the regulations in force in Germany or beyond the rules set out in these

Operating Instructions, these measures must be coordinated with a supervisory authority in the respective country before the tank is put into operation.

4. FUNCTIONAL DESCRIPTION

In the standard design, a WALTHER-PILOT material pressure tank consists of a container with a removable lid, a compressed air inlet fitting assembly comprising a air inlet valve, a pressure regulator with back pressure control, a component-tested safety valve and manometer, a material inlet sealing cap located on the lid and a material outlet valve (also on the lid) consisting of a pipe to the material outlet and a outlet ball valve. All standard material pressure tanks can alternatively be supplied with a material outlet at the bottom.

Liquid or paste-like media are transported to the user device, for example a spray gun, by the effect of the static pressure of an air cushion. The spraying performance, for example of a spray gun, is considerably increased by the use of a material pressure tank, since it allows the optimum fineness and width of the spray jet. Apart from their use for spraying purposes, WALTHER-PILOT material pressure tanks are also suitable for numerous other applications, for example for mixing and dosing, in machine and plant engineering, etc..

The required delivery pressure is adjusted by a pressure regulator with back pressure control on the air input side. Once the operating pressure has been set, the tank ensures an absolutely even flow of the medium to the user device.

Material pressure tanks can also be equipped with agitators as an optional extra. Agitators ensure constant material consistency and prevent the material from settling. Agitators can be fitted to tanks with a capacity of 4 litres and above. Manually operated, air-powered or electric agitators in different versions are available.

Furthermore, material pressure tanks can also be equipped with various gauges, such as level or temperature indicators.

5. INSTRUCTIONS

5.1. General Instructions

Read carefully this operation manual before handling the device and before putting it into operation.

The operation manual is part of the product and is kept in close of it. The service staff must be trained.

Observance of the instructions of this and other manuals regarding the use of equipment elements as mixers and fill level indicators as well as elements for consumption, for example, spray gun. This is absolutely necessary in order to avoid risks and damages. The observance of the valid national, local and specific for equipment regulations and requirements of the respective country is also compulsory.

The field of application of the pressure device is specified in this operation manual in chapter *functional use*.

For the installation, putting into operation and maintenance of the pressure device, the respective chapters of these operation manual shall be observed.

The specific modifications and constructions might differ in their technical details. In case of eventual unclear matters we insist you to contact WALTHER-PILOT, specifying the part number and type designation of the device.

For damages that have occurred in result of non-observance of the instructions for use or as a result of inappropriate repair as well as the use of non-original spare parts, no responsibility is undertaken.

In case you do not understand the contents of this operation manual, please, address WALTHER-PILOT!

5.2. Safety and Instruction Signs

Please, pay attention to the following safety and instruction signs:



Danger!

Danger for the person's life, danger of injuries



Danger!

Important instructions for anti-explosion protection



Attention!

Possible machine damages



Instruction!

Useful Information!

5.3. Safety Instructions



In the execution of all activities **for assembly and maintenance**, as for example transport, warehouse storage, installation, connection to the electric power supply or compressed air supply, putting into operation, maintenance and technical service, there must be no **explosive atmosphere**.

In processing inflammable materials (lacquers, adhesives, detergents) the risks for health damage and explosion an fire are higher.



All **activities for assembly and maintenance**, must be performed only by qualified, specialised personnel who is familiar with the respective regulations for maintenance and technical service of the devices.

Assembly and maintenance activities must be performed only with the device off.

The compressed air fitting must be detached from the grid and deaerated.

The electric connection should be not under voltage, it must be safed against switching on through carelessness.

Observe all safety instructions of this operation manual as well as the operation manuals for the elements of the equipment. Besides that all national or other safety and preventive protection regulations must be observed.

The electrostatic charge during the pressure device operation may result in the formation of sparks and current rushes. That is why the pressure device, the parts of its equipment, the air and the material lines, the consumable unit and the electric conducting surfaces within the working section must be earthed.

5.4. Conditions for Use

Before fill of the operating medium, subject of processing, it must be checked whether the substance is dangerous. The information about the product and eventually the safety technical data sheet of the manufacturer must be taken into consideration. In case this information is not available, data shall be requested from the manufacturer, the supplier or the importer. Observe the instructions for processing and safety of the manufacturer of the operating medium and the detergent agents. The aggressive and corrosive materials harm your health.

The premises where hazardous materials are stored, refilled or processed, should be sufficiently aired, eventually the installation of mechanical ventilation might be necessary. At failure of the ventilation, work should be immediately ceased and the entire device brought to a halt.

Compatibility between feeder, tank materials and seals is checked and guaranteed by the operator, by paying attention to corrosion and abrasion.

The pressure device may only be used if, in compliance with the regulations for each injection chamber, the necessary safety devices are available (safety valves, pressure gauges, etc.) and are ready for operation. As a result of the security valve release, risky substances might be released in the atmosphere. For this reasons certain conditions of use, respectively mediums for use require security installations, deviating from the standard!

The reducing valve of the construction must be selected in a way that the capacity of flow is less than the capacity of release of the safety valve.

In case the permissible working parameters can not be attained, or respectively exceeded, in operating for example, pumps for filling or emptying, the constructor must guarantee through the respective controlling, measuring and restrictive equipment, that inadmissibly high pressure and vacuum shall not occur.

The useful information on the plate of the pressure device manufacturer and the specified fill weight on it, must not be exceeded.

The environment temperature of the envisaged mounting site must not exceed or be below the norm of the specified working temperature.

At operation with water we firmly recommend the use of an appropriate material for protection against corrosion and icing of the outer casing of the double-walled tank!

First and foremost the security equipment and the locking elements must be protected from pollution and damage during operation.

With applications, where the failure of the device or one of its equipment parts cab result in injury of people, the constructor should take relevant security measures.

If while operating you notice something unusual, bring the device to a halt and consult WALTHER-PILOT.

Serious injuries of people and material damages may be caused as a result of inexpedient installation, use of the device out of purpose, wrong service, non-observance of the safety instructions, inadmissible removal of parts from the body or of the protection covers, inappropriate repair and putting into operation, as well as changes in the construction of the device.

6. DEVICE SPECIFIC INSTRUCTIONS

6.1. Instructions on Pressure Device Use Within Another Product

If the pressure device is envisaged to be built in in another product, this operation manual may only provide basic issues in relation to assembly, the work, the maintenance and the putting into operation. The manufacturer of the end product is obliged to take also into consideration these basic issues in the documentation to be issued by him.

Anyway, putting into operation is prohibited to the moment the compatibility of the end product with all important directives and regulations is confirmed. The same is valid for the case when the safety equipment necessary for the operation are not included in the scope of the WALTHER-PILOT delivery.

6.2. Other Instructions

no data

7. PROPER USE

Material pressure tanks are designed to be used exclusively for delivering liquid or paste-like media that are put under pressure by a gas cushion (compressed air and other non-toxic, non-aggressive and non-flammable gases).

The type of media to be used is determined by the materials specified on the rating plate and in the chapter *Technical Data* (see also Directive 2014/68/EU Article 9 Paragraph 1), as well as by the material compatibility and by possible dangers that might additionally exist.

The tank must be used only with the operating parameters specified on the rating plate and in Chapter 1 (maximum permissible operating pressure, maximum permissible operating temperature, usable volume, filling material, filling mass, etc.).

WALTHER Spritz- und Lackierungssysteme GmbH undertakes the responsibility for the device subject of the delivery, i.e. for the pressure device and eventually for the other elements of the equipment. The operator is obliged, observing the applicable for the concrete place, regulations and instructions, and being personally responsible, to take care for the suitability of the device for the concrete purpose of application. WALTHER Spritz- und Lackierungssysteme GmbH are not responsible for property damages and injuries of persons as a result of non-observance of the existing regulations, wrong service and/or wrong re-equipment or equipment of the device.

Proper use also implies that the operator has read, understood and observed all the instructions set out in these Operating Instructions. If you require further information (in particular with regard to safety measures), please contact WALTHER Spritz- und Lackiersysteme GmbH.

8. IMPROPER USE

The pressure tank must not be operated solely with liquid pressure (i.e. without a gas cushion).

The pressure tank must not be pressurised using a toxic, flammable or aggressive gas. In particular, pressurising the tank using pure oxygen is strictly prohibited, since the valve fittings in particular are coated with a thin film of grease: **RISK OF EXPLOSION!** The pressure tank must not be operated with nitrogen unless suitable safety devices have been fitted.

Material pressure tanks must not be used for transporting materials. Exceptions are permissible only if suitable measures have been taken by the customer to allow the tank to be used at various locations within a single plant.

The pressure tank must not be used for the long-term storage of materials.

The pressure tank must not be used for materials that are incompatible with the tank or sealing materials and/or which cause corrosion or abrasion particularly at the pressure-bearing walls of the tank.

The type plate attached to the tank and the information markings must not be removed or be made completely or partially illegible.

No changes or modifications may be made to the pressure-bearing tank components or accessories.

The accessories with a safety function fitted to the tank (safety valves, manometers, etc.) must not be changed or deactivated. The adjustment lead seal and the cap of the safety valve must not be damaged or removed. The safety devices must be protected against dirt and contamination.

9. PRESSURE DEVICE USE IN EXPLOSION- HAZARDOUS ZONES

9.1. Explosion-Hazardous Zones

Solely the operator or, in case there is a doubt in defining the explosion-hazardous zones, the competent control office, shall decide which zones in the open or in closed premises shall be specified as explosive-hazardous as per the regulations or the provisions in effect.

9.2. Suitability of the Pressure Device for Explosion-Hazardous Zones

With the actual pressure tank it is not a question of a device as per directive 2014/34/EU (directive ATEX)! Depending on the environment of operation it is possible the pressure tank to indicate internal explosive atmosphere in accordance with the instructions. As a result certain elements of the equipment of the pressure tank as, for example, electric or pneumatic mixer mechanisms, indicators for the level of filling, etc., may be considered as autonomous devices as per the directive stated above.

If the use of the pressure tank is necessary in explosion-hazardous zone and/or incendiary, inflammable or explosive environment, the operator must check and guarantee that all technical data and indications as per ATEX correspond to the required instructions for anti-explosion protection.


10. INSTALLING THE PRESSURE TANK



There must be no explosive-hazardous environment during installation.

- Pressure tanks must be installed and fixed in such a way that they are not allowed to change their position and impair their safe operation. They must be sufficiently accessible to allow them to be operated, maintained and checked. They must be installed in such a way that employees or third parties are not put at risk in the event of a leakage or a malfunction. The necessary protective zones must be maintained.
- Fire, naked flames and smoking are strictly prohibited within a radius of at least five metres from the tank. If highly flammable materials (e.g. cleaning agents) are used, there is an increased risk of explosion and fire in the working area.
- The tank must be earthed by the customer to protect against the build-up of electrostatic charge.
- Connections for electrically powered agitators, measurement and control devices must be provided by the customer. If necessary, explosion-protection regulations must be observed. Such work may be carried out only by authorised specialist companies. *The instructions and directions given in the instruction manual of the equipment manufacturer must be observed at all times!*
- Before using the tank for the first time, ensure that there is a suitable pressure-reducing valve in the pressure feed line and that the required safety devices are properly installed and are fully functional.
- All tank connections must be properly installed by trained personnel, and any connections that are not required must be permanently and securely sealed and be pressure-proof.
- Connection lines, pipes, hoses and screw fittings provided by the customer must be designed and manufactured in such a way that they comply with the existing regulations and are able to safely withstand the expected mechanical, chemical and thermal stresses resulting from the operation of the tank.
- A possible connection configuration is shown below.
- Before the tank is used for the first time, all components of the tank that come into contact with material must be cleaned (or rinsed through) with a suitable cleaning agent. For this purpose, please refer to the chapter on *Cleaning the Tank*.

10.1 Possible Connection Configuration

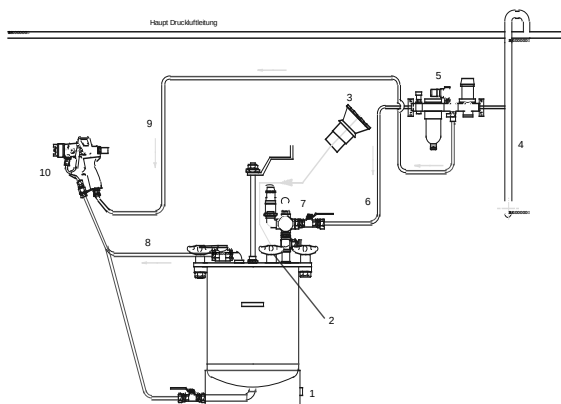

Description of the Connection Configuration:

- Earth (ground) connection
- Material filling valve (if available)
- Filling funnel (overfilling protection Part Number V4422064000) – not included as part of the standard equipment of the pressure tank

- Compressed air connection (customer installation)
- Filter pressure regulator (customer installation) – please ensure that the maximum admission pressure of the pressure tank pressure regulator (see Technical Data) is not exceeded!
- Compressed air connection hose (electrically conductive) – not included as part of the standard equipment. Can be ordered from WALTHER-PILOT.
- Compressed air reduction valve
- Material connection hose – not included as part of the standard equipment. Various hose versions can be ordered from WALTHER-PILOT.
- Compressed air connection hose to user device (e.g. spray gun) – if required.

11. USING THE PRESSURE TANK

Safety Instructions:



- Before refilling, cleaning, maintenance and repair work is carried out, the entire unit must be depressurised. Please refer to the chapter *Taking the Tank Out Of Operation* !**
- WARNING: Risk of burns!** All parts of the vessel may become hot when the pressure vessel is in operation. Always wear suitable protective clothing (gloves, etc.).
- If solvents or cleaning agents on the basis of halogenated hydrocarbons, such as 1,1,1-trichloroethane or methylene chloride (dichloromethane) are used, chemical reactions might occur at aluminium or galvanised parts. This may cause the parts to oxidise and in extreme cases an explosion-like reaction may occur. Therefore, use only those solvents and cleaning agents that do not contain these components.
- Equipment components with a safety function (e.g. safety valves and manometers) must be regularly checked to ensure that they are fully functional. Please refer to the chapter *Maintenance*.
- The tank must on no account be opened until it has been completely depressurised – **RISK OF INJURY!**
- Dangerous substances might escape from the tank. For that reason, always wear the regulation protective clothing and breathing protection when carrying out any work whatsoever on the tank.

11.1 Filling

Before opening the tank, ensure that all pressure-bearing lines are closed and that the tank has been completely depressurised (see Safety Instructions!).

Ensure that the pressure tank is not filled beyond the usable volume.

The easiest way of filling the tank is through the filler opening in the lid (from Type MDG 12) using the filling funnel V4422064000 which is available as an optional extra. This rules out the possibility of overfilling the tank:

- Turn the star grip clamp of the material inlet sealing cap counter-clockwise until the cap can be lifted and withdrawn from the opening.
- Insert the filling funnel into the opening until the collar rests firmly on the O-ring on the lid.
- Ensure that the bleed valve and the material outlet valve are closed.
- The tank can now be filled with material until material becomes visible in the funnel. The air cushion that remains in the tank prevents the tank from being overfilled.
- Lift the filling funnel slightly to allow the air cushion to escape. The material left in the funnel will then flow into the tank.
- Clean the seating surface of the material inlet sealing cap, ensure that the O-ring is correctly seated in the lid

of the sealing cap and insert the sealing cap into the opening.

7. Close the material inlet sealing cap by turning the star grip clamp clockwise to its limit.

The material to be processed can either be filled directly into the tank or be put into the tank in appropriately-sized non-reusable cans or insert buckets (available as an optional extra). The tank types MDG 22 and MDG 45 are especially suited for the use of original Euro-cans (10-litre can for the MDG 22, 30-litre can for the MDG 45). Proceed as follows:

1. To remove the lid from the tank, first unscrew the star grip clamps. Hold the lid by two star grip clamps and pull it upwards, removing it from the tank.
2. Place the can or insert bucket into the tank or fill the tank with material up to approximately 5 cm below the upper edge of the flange.
3. Ensure that the seal and the sealing surfaces are clean and that the lid seal is seated in the groove.
4. Place the lid on the tank.
5. Tighten the star grip clamps cross-wise and evenly. The clamps must be screwed hand-tight without the use of excessive force. The lid seal is a toroidal sealing ring and not an axial squeeze seal!

11.2 Putting the Tank Into Operation

1. Check the tank connections (especially the compressed air and material connections) to ensure that they are fitted tightly.
2. All star grip clamps on the tank lid must be present and be firmly tightened. The star grip clamp of the material inlet sealing cap (if fitted) must be firmly tightened.
3. Ensure that all safety devices (safety valve, manometer, etc.) are in a fault-free condition and are fully functional.
4. The air bleed valve, the air inlet valve and the material outlet valve must be closed.
5. The regulator screw of the pressure regulator must be turned so far counter-clockwise that the pressure spring is completely unloaded.
6. Ensure that the user equipment (e.g. spray gun) is properly connected and ready to operate.
7. Open the air inlet valve.
8. Turn the pressure regulator screw clockwise until the required material pressure is indicated on the manometer. If the admission pressure of the safety valve is exceeded, the valve will open! If this occurs, the pressure must be reduced by turning the regulator screw counter-clockwise.
9. Open the material outlet valve. For information on the correct use of the user equipment (e.g. spray gun), consult the operating manual of the corresponding manufacturer.

Note:

In order to avoid problems in setting the operating pressure, the desired pressure value should always be approached from a lower pressure level. If you later want to adjust the pressure to a new, lower value, first adjust the pressure to a level that is lower than the desired new operating pressure. Reducing the operating pressure at the regulator screw has the effect that air escapes from the tank via the pressure regulator.

11.3 Taking the Tank Out of Operation

Note:



The pressure in the tank must be released only via the air bleed valve. On no account may the pressure be released via the safety valve or by loosening the star grip clamps or the filler sealing cap!

1. All pressure-bearing lines and hoses must be blocked off. In particular, the air inlet valve and the material outlet valve must be closed. If necessary, remove the air and material connection hoses.
2. Open the air bleed valve by turning it counter-clockwise.
3. The pressure tank must on no account be opened until all of the compressed air has completely escaped.

12. CLEANING THE TANK

Safety Instructions:



- Cleaning work may be carried out only on a tank which has been completely depressurised and from which all pressure-bearing lines and hoses have been disconnected. See the chapter *Taking the Tank Out of Operation* !
- Observe the safety instructions provided by the manufacturers of the cleaning agent. In particular, aggressive and corrosive cleaning agents can be harmful to health.
- Always wear proper protective clothing and breathing protection when carrying out cleaning work.
- When carrying out cleaning work, ensure that material residues and caked material are not ignited by the tools being used or by sources of heat or other causes of ignition.
- The use of highly flammable materials means that there is an increased risk of explosion and fire in the working area.

Cleaning Instructions:

- For cleaning the tank, use only those cleaning agents which do not contain the following components: halogenated hydrocarbons (such as 1,1,1,-trichloroethane, methylene chloride, etc.), acids and acidic cleaning agents, regenerated solvents (so-called cleaning solvents) or paint removers. These components cause chemical reactions on galvanic parts and result in corrosion damage.
- Do not use hard or sharp objects to clean the tank (especially for tanks with special linings such as Vetrodur, Teflon, etc.) in order to avoid scratching the surface.
- Use only those cleaning agents which do not cause chemical or thermal reactions on contact with the actual spraying materials.
- Never immerse the complete tank in solvent or any other cleaning agent. The fault-free operation of the equipment components, in particular the operation of equipment components with a safety function (safety valves, etc.), can otherwise no longer be guaranteed.
- When cleaning the pressure-bearing parts of the tank, do not use methods which cause corrosion or which reduce the thickness of the walls (e.g. mechanical sanding or sand blasting).

Procedure:

1. Remove the lid from the tank by releasing the star grip clamps and holding the lid by two star grip clamps and pulling it upwards.
2. Remove any material residues if necessary.
3. Wipe the tank walls with a clean cloth, if necessary soaked in cleaning agent.
4. Clean the tank sealing surfaces and the lid gasket in the same way.

Ideally – and if possible due to the installation and use of the pressure tank – the tank and the material connection lines should be rinsed with cleaning agent. Proceed as follows:

1. Fill the tank with a cleaning agent that is compatible with the operating medium up to a level that also reaches the outlet fittings.
2. Replace the tank lid and put the tank into operation (see chapter *Putting the Tank Into Operation*).
3. Rinse the whole system until only clean cleaning agent is seen to arrive at the user equipment.
4. Take the tank out of operation (see chapter *Taking the Tank Out of Operation*) and, if necessary, remove any cleaning agent residues from the tank.

12.1 Cleaning the Tank for Use in the Food or Pharmaceutical Industry

If the tank is used in the production process in the food or pharmaceutical industry, special attention must be paid to maintaining absolute hygiene when filling, operating and cleaning the tank.

Observe the regulations for processing food and pharmaceutical products. Improper or insufficient cleaning represents a health risk and may result in illness or infection by the food or pharmaceutical product being processed.

Use only appropriate cleaning agents that are harmless to health and which have been approved for contact with the respective product.

When cleaning the tank, ensure that no cleaning agent residues whatsoever remain in the tank. Only those tanks may be used which are not subject to corrosive influences.

12.2 Waste Disposal

Waste materials produced as a result of cleaning and maintenance work must be properly disposed of in accordance with the existing laws and regulations.

Warning:



Observe in particular the instructions given by the manufacturer(s) of the operating media and the cleaning agent. Waste material that is disposed of incorrectly or illegally poses a risk to the health of human beings and animals.

13. MAINTENANCE AND INSPECTION

Safety Instructions:



- Maintenance and repair work may be carried out only on a tank which has been completely depressurised and from which all pressure-bearing lines and hoses have been disconnected. See the chapter *Taking the Tank Out of Operation* !
- When carrying out maintenance work, ensure that material residues are not ignited by the tools being used or by sources of heat or other causes of ignition.

The use of processed (i.e. cleaned and filtered) compressed air and regular maintenance will ensure that serious faults will hardly ever occur.

Maintenance Work

- a) Accessory components which have a safety function (e.g. safety valves and manometers) must, at regular

intervals, be routinely checked, tested for accuracy and serviced. *The frequency of the checks and the degree of accuracy required are based on the user's experience and the respective application. However, these checks must be carried out every 3 months at the latest. If you have any doubts about your ability to assess the reliability yourself, do not hesitate to consult an expert for advice.*

- Check the function of the safety valve as follows: with the tank under pressure (at least 80-90 % of the set pressure), either activate the valve test lever or turn the valve test screw counter-clockwise by a few turns (depending on the type of tank) until the valve blows. Afterwards, turn the valve test screw clockwise to its final position. The valve is then sealed again.
- Ensure that the adjustment lead seal (if necessary also the lead seal disk or cap) of the safety valve are undamaged.
- The manometer can be removed for the necessary inspection using a reference unit. *Damaged or inadequately functioning safety fittings must be replaced without delay by parts of the same standard.*

- b) If fitted, the pressure regulator must be checked at regular interval to ensure that it is fully functional. During this check, apply a light coating of grease to the thread of the pressure regulator screw. For this purpose, use a non-acidic, non-resinous grease.
- c) The functional reliability of the shut-off valves (air inlet and material outlet valves) must be checked regularly.
- d) All pressure-bearing walls must be regularly checked for corrosion. The corrosion allowance given in the chapter *Technical Data* is taken into account in the design of the tank. If this allowance has been used up on one of the walls of the tank, the tank must be taken out of operation.

All equipment components with a safety function (safety valves, manometers, etc.) and all pressure-bearing equipment components must, if they have been supplied by WALTHER-PILOT, be replaced only by original replacement parts! Lists of replacement parts can be found in the Appendix. Wearing parts are marked in bold type in the parts list. If you require replacement parts, please state the serial number, the type and the year of manufacture of the pressure tank.

Inspection (periodic checks)

- a) Observe the intervals for periodic checks (see chapter *Operating Regulations*). Contact the notified body in good time..
- b) The notified body must be informed immediately as soon as the number of loadings given in the chapter *Technical Data* has been reached.

14. OVERHAUL / REFITTING / REPLACEMENT OF MAJOR COMPONENTS

Safety Instructions:



- Overhaul and refitting work may be carried out only on a tank which has been completely depressurised and from which all pressure-bearing lines and hoses have been disconnected. See the chapter *Taking the Tank Out of Operation* !
- When carrying out overhaul and refitting work, ensure that material residues are not ignited by the tools being used or by sources of heat or other causes of ignition.

Detailed overhaul and refitting work (e.g. installation of an agitator or measuring devices, conversion of the air inlet or material outlet fittings) or the replacement of major components should be carried out by WALTHER-PILOT.

WALTHER-PILOT should at least be informed of the type and extent of the work in order to decide whether the work may be carried out by the customers themselves or by a third party.

In any event, the relevant supervisory body (notified body) is to be informed whenever detailed overhaul, refitting or the replacement of major components is to be carried out, since inspections that have already taken place may have to be repeated.

WALTHER-PILOT will not accept any liability for injury to persons or damage resulting from failure to observe the above-mentioned rules and regulations and/or from improperly executed work.

15. POSSIBLE FAULTS AND THEIR CORRECTION

Safety Instructions:

-  Maintenance and repair work may be carried out only on a tank which has been completely depressurised and from which all pressure-bearing lines and hoses have been disconnected. See the chapter *Taking the Tank Out of Operation* !
- When carrying out repair work, ensure that material residues are not ignited by the tools being used or by sources of heat or other causes of ignition.

All equipment components with a safety function (safety valves, manometers, etc.) and all pressure-bearing equipment components must, if they have been supplied by WALTHER-PILOT, be replaced only by original replacement parts! Lists of replacement parts can be found in the Appendix. If you require replacement parts, please state the serial number, the type and the year of manufacture of the pressure tank.

Air side:

- a) Safety valve does not open when the set pressure is reached:
 - Check the function of the safety valve (see chapter *Maintenance*).
 - If necessary, replace the safety valve.
- b) Manometer indicates incorrect value:
 - Check the manometer using a reference manometer (see chapter *Maintenance*).
 - If necessary, replace the manometer.
- c) Leakage between the tank flange and the lid:
 - Clean the tank flange, lid sealing surfaces and seal groove. Do not use sharp or pointed objects for this purpose, as these may scratch and damage the sealing surfaces.
 - If necessary, replace the lid seal.
 - Tighten the star grip clamps cross-wise and evenly. Please note that the lid seal is a toroidal sealing ring and not an axial squeeze seal.
- d) Leakage in the air supply:
 - Tighten the air connection piece.
 - Tighten the leaking fitting connections (if necessary, replace seals).
 - Replace defective fittings and connections (observe safety instructions).
 - Compressed air fitting is defective: overhaul or replace compressed air fitting.
 - Agitator mounting leaks: overhaul or replace agitator mounting.

Material side:


- e) Leakage at material outlet.
 - Tighten the material hose connection.
 - Tighten the leaking fitting connections (if necessary, replace seals).

- Replace defective fittings and/or connections.

16. WARRANTY

1. It is the duty of the Customer to inspect the goods immediately in accordance with §§ 377, 378 HGB and, in the event of defects, to make any complaints in writing. Complaints must be made within a period of three working days after receipt of the goods.
2. The above provisions also apply in the case of excess delivery or if the delivery is short..
3. We do not accept any liability for damage resulting from unsuitable or improper use, defective installation or operation by the Customer or by third parties, normal wear and tear, incorrect or careless treatment, the use of unsuitable operating fluids, substitute materials, defective construction work and unsuitable construction locations or from chemical, electrochemical or electrical influences, unless they are the result of our negligence. We will accept liability for damage to electric motors supplied by us only if the motors have been connected via a protective motor switch that conforms to the VDE guidelines and if this switch has been adjusted to the rated current of the motor before the motor is put into operation.
4. In the event of a warranty claim, we are entitled to choose whether to repair the defect at our own expense or to provide a replacement within an appropriate period. If we are not prepared or not able to do so, or if the repair or replacement is delayed for reasons within our control, or if we refuse to repair the defect or provide a replacement, or if this should fail for other reasons, the Customer is entitled to cancel the order or to demand a corresponding reduction in the purchase price.
5. The period of warranty is six months.
6. We do not accept liability for any damage other than to the delivery item itself.
7. The afore-mentioned limitation of liability does not apply if the damage is caused with intent or is the result of gross negligence on our part, or if the warranty liability is based on the lack of an assured property, which includes the risk of consequential damage. Furthermore, the limitation of liability does not apply if we are found responsible for infringing an essential contractual obligation.
8. In the event that liability has not been excluded, our liability to provide compensation is limited to the foreseeable damage; this does not apply if the cause of the damage is the result of wilful action.
9. In the case of second-hand goods, we will accept liability only if these have been overhauled by us and brought to a technical state which approaches the technical state of new goods in accordance with the justified expectation of the Customer.

17. DRAWING(S)

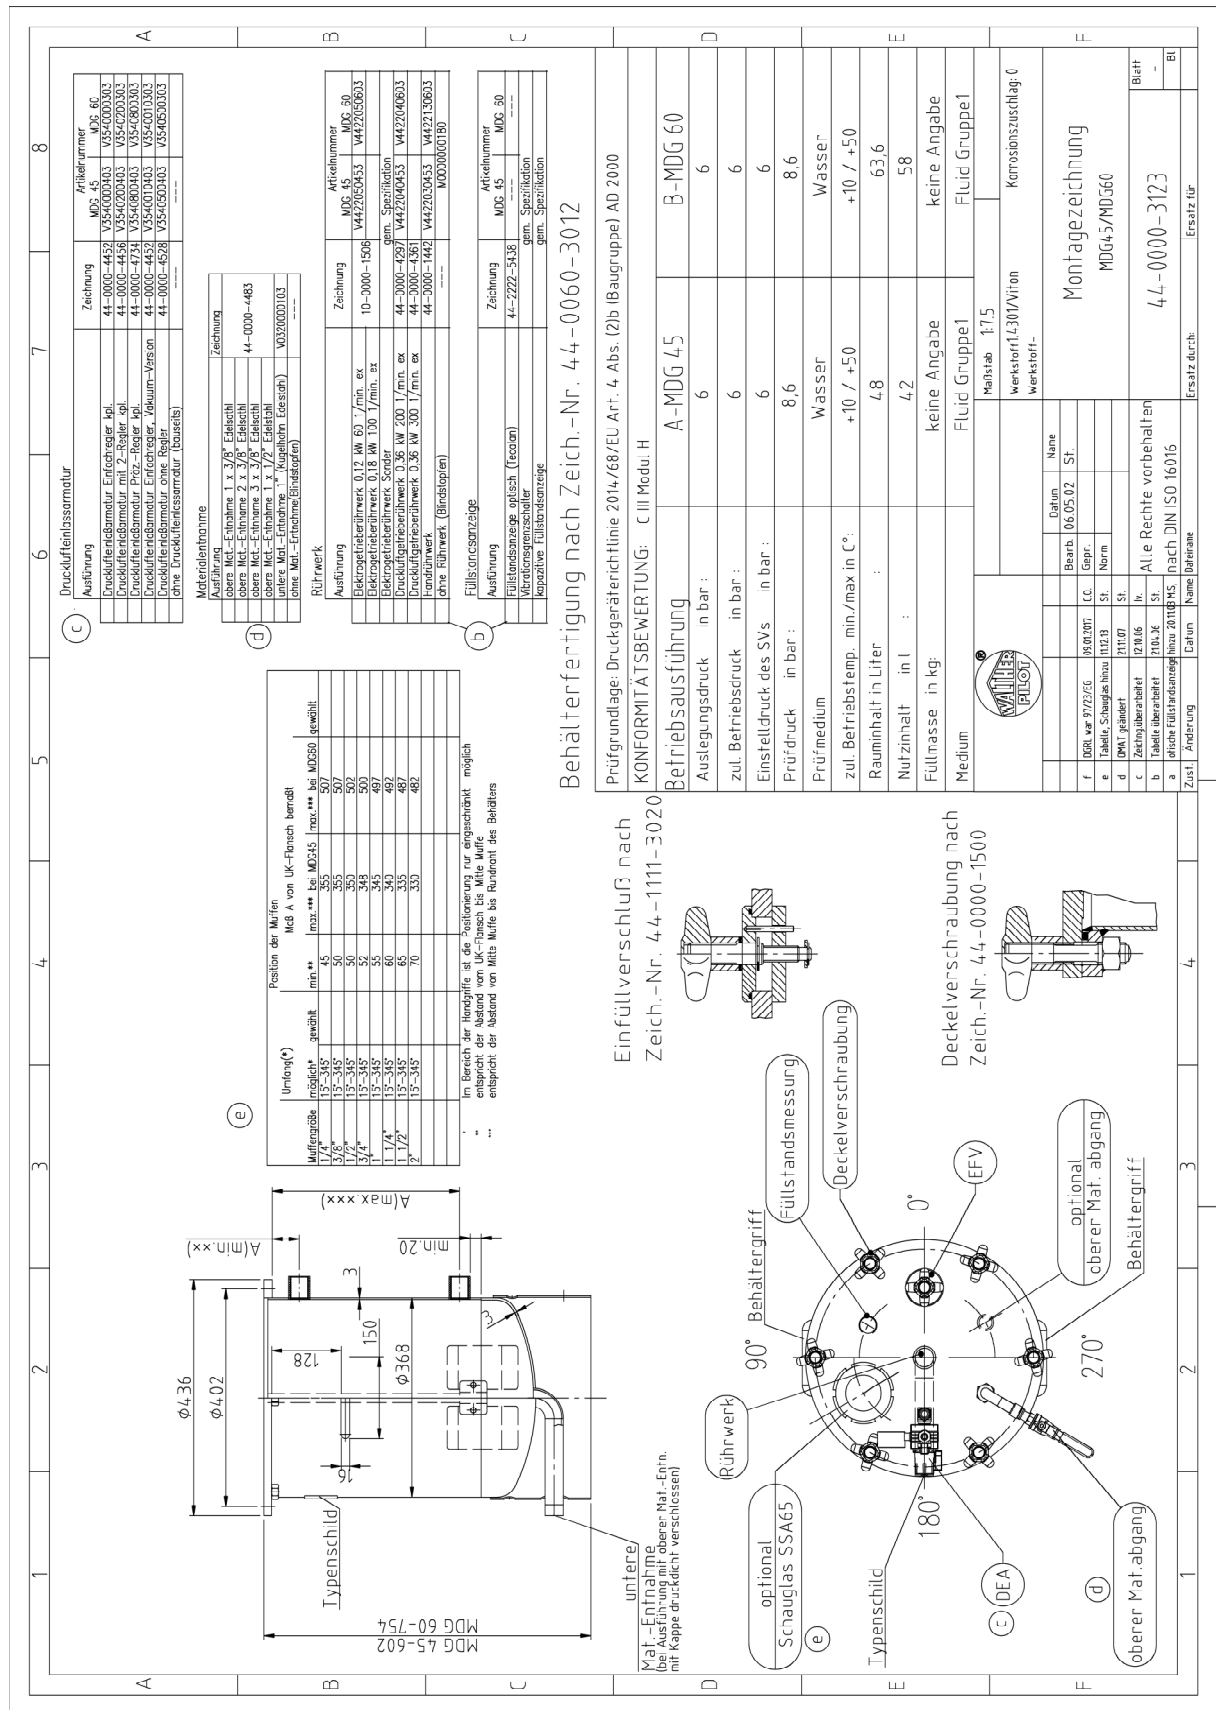

18. APPENDIX


Ersatzteilliste Materialdruckgefäße Typ MDG 8 - MDG 500

Replacment-parts-list material-pressure-vessel type MDG 8 - MDG 500




- **Bei Bestellung von Ersatzteilen bitte unbedingt Typenbezeichnung, Fabriknummer, Betriebsdruck und Baujahr mit angeben. /**
When ordering replacment parts please make sure to state the type-designation, fabrication-number, operating- pressure-rating and year of contrcution.
- Wir empfehlen, die gekennzeichneten Ersatzteile (Verschleißteile) auf Lager zu halten. /
It is recommended to keep in stock all faced parts (wear-parts).
- Sonderausführungen und Bauvarianten können in technischen Details abweichen. Bei eventuellen Unklarheiten wird dringend empfohlen, unter Angabe der Fabriknummer und der Typenbezeichnung Rücksprache mit WALTHER-PILOT zu nehmen. /
The technical details of the specific modifications and construction variants may differ. In case of eventual unclear issues we firmly recommend to contact WALTHER-PILOT, specifying the pressure-vessel type and serial-number of the device.

Explosionsansicht /
Exploded-view:

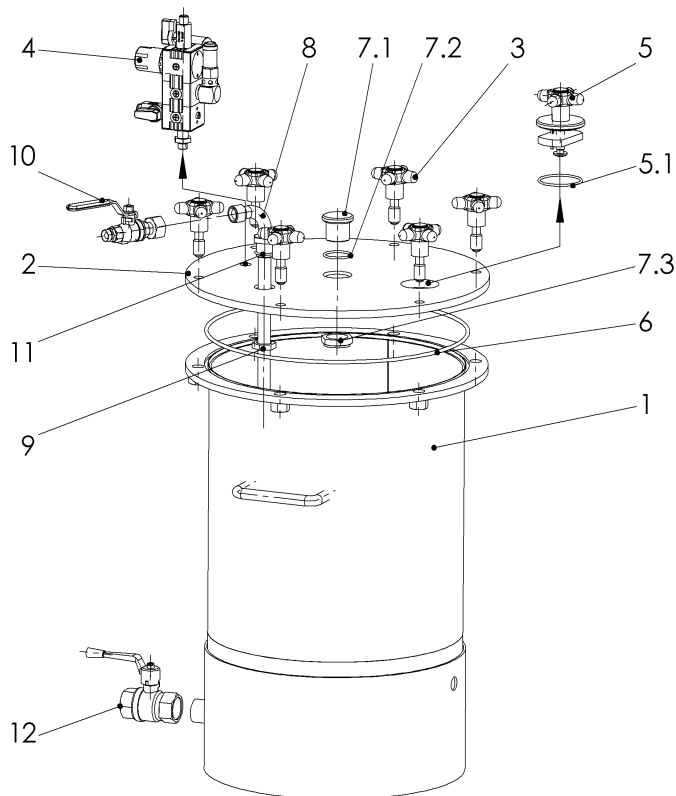

Detailansicht (Einbauzustand) /
Detail-view (installation-situation)

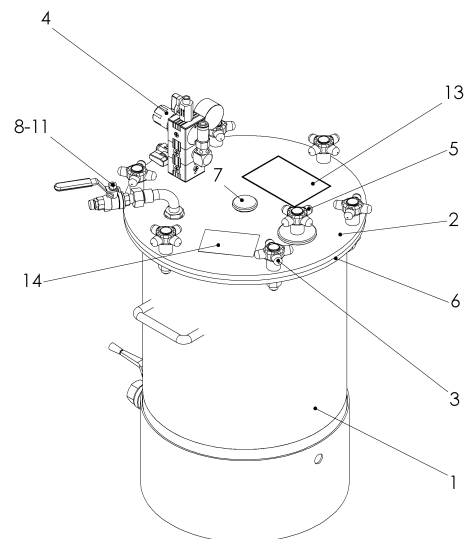


Pos./ Item	Bezeichnung/ Description	Artikelnummer/ Ident-No.
1	Behälter / Vessel	kein Ersatzteil / no spare-part
2	Deckelrunde solo / Cover-plate solo	kein Ersatzteil / no spare-part
3	Sterngriff kpl. / Star-grip compl. Standard-Ausführung (Alu-Griff) / Standard-Version (Alu-handle) (Klemmbereich bis 15 mm Deckelstärke / clamping-range until 15 mm cover-thickness) Behältertyp / Vessel-type MDG 8 / MDG 12 / MDG 24 / (4 Stck. / 4 Pcs.) Behältertyp / Vessel-type MDG 22 – MDG 500 / (6 Stck. / 6 Pcs.)	V 44 220 10 000 V 44 220 10 000
	Sterngriff kpl. / Star-grip compl. Kunststoff-Griff / Plastic-handle Ausführung für Behälter mit Betriebstemperatur > 50°C. / Version for vessels with working-temperature > 50°C. (Klemmbereich bis 15 mm Deckelstärke / clamping-range until 15 mm cover-thickness) Behältertyp / Vessel-type MDG 8 / MDG 12 / MDG 24 / (4 Stck. / 4 Pcs.) Behältertyp / Vessel-type MDG 22 – MDG 500 / (6 Stck. / 6 Pcs.)	V 44 220 10 X00 V 44 220 10 X00
③ 4	Druckluftereinlassarmatur Einfachregler kpl. / Air-inlet-mounting single regulator compl. <i>Für Behältertyp / for vessel-type MDG 8</i> <i>Behälteranschluss Messing / Vessel-connection brass</i> Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar <i>Behälteranschluss Edelstahl / Vessel-connection stainless-steel</i> Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar <i>für Behältertyp / for vessel-type MDG 12 – MDG 500</i> <i>Behälteranschluss Messing / Vessel-connection brass</i> Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 6,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 10,0 bar <i>Behälteranschluss Edelstahl / Vessel-connection stainless-steel</i> Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 6,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 10,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: -1/+6,0 bar Druckluftereinlassarmatur mit 2.-Regler kpl. / Air-inlet-mounting with 2.-regulator compl. Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 6,0 bar Ersatzteile der Druckluftereinlassarmaturen sind auf einer separaten Ersatzteilliste aufgeführt! Replacement-parts of the air-inlet-mountings are listed on a separate replacement-part-list! Behälterversionen ohne Druckluftereinlassarmatur / Vessel-Version without air-inlet-mounting Die Durchgangsbohrung wird mit den nachfolgenden Einzelteilen verschlossen / The following parts are used to seal the through-bore in the cover-plate.	V 35 450 10 404 V 35 450 10 403 V 35 400 00 154 V 35 400 00 204 V 35 400 00 304 V 35 400 00 404 V 35 400 00 454 V 35 400 00 604 V 35 400 01 004 V 35 400 00 153 V 35 400 00 203 V 35 400 00 303 V 35 400 00 403 V 35 400 00 453 V 35 400 00 603 V 35 400 01 003 V 35 400 10 153 V 35 400 10 203 V 35 400 10 303 V 35 400 10 403 V 35 400 10 453 V 35 400 10 603 V 35 402 00 153 V 35 402 00 203 V 35 402 00 303 V 35 402 00 403 V 35 402 00 453 V 35 402 00 603
4.1	Blindstopfen	V 35 400 01 143
4.2	Dichtung	V 09 001 55 001
4.3	Sechskantmutter	V 35 400 00 123
5	Einfüllverschluss NW 55 / Filling-port-closure NW 55 Standard-Ausführung (Alu-Griff) / Standard-Version (Alu-handle) (Klemmbereich bis 15 mm Deckelstärke / clamping-range until 15 mm cover-thickness) Ausführungen für andere Deckelstärken auf Anfrage / Version for other cover-thicknesses on request) Ausführung verzinkt / Version galvanized Ausführung Edelstahl / Version stainless-steel Einfüllverschluss NW 55 / Filling-port-closure NW 55 Kunststoff-Griff / Plastic-handle Ausführung für Behälter mit Betriebstemperatur > 50°C. / Version for vessels with working-temperature > 50°C. (Klemmbereich bis 15 mm Deckelstärke / clamping-range until 15 mm cover-thickness) Ausführungen für andere Deckelstärken auf Anfrage / Version for other cover-thicknesses on request) Ausführung verzinkt / Version galvanized Ausführung Edelstahl / Version stainless-steel Einzelteile / Individual-parts: O-Ring Ausführung/Version Perbunan O-Ring Ausführung/Version Viton	V 44 220 20 000 V 44 220 20 333 V 44 220 20 X00 V 44 220 20 X33 V 09 102 61 000 V 09 102 61 001


Pos./ Item	Bezeichnung/ Description	Artikelnummer/ Ident-No.
① 6	Deckeldichtung / Cover-seal Behältertyp/Vessel-type MDG 8 Version Perbunan Behältertyp/Vessel-type MDG 8 Version Viton Behältertyp/Vessel-type MDG 12 + 24 Perbunan Behältertyp/Vessel-type MDG 12 + 24 Viton Behältertyp/Vessel-type MDG 22 Perbunan Behältertyp/Vessel-type MDG 22 Viton Behältertyp/Vessel-type MDG 45 - 500 Perbunan Behältertyp/Vessel-type MDG 45 - 500 Viton	V 09 110 01 000 V 09 110 01 001 V 09 102 59 000 V 09 102 59 001 V 09 103 32 000 V 09 103 32 001 V 09 102 62 000 V 09 102 62 001
7	Behälterversionen ohne Rührwerk / Vessel-version without agitators Die Rührwerksbohrung wird mit den nachfolgenden Einzelteilen verschlossen / The following parts are used to seal the through-bore in the cover-plate.	
7.1	Blindstopfen / Blind-plug (Klemmbereich bis 15 mm Deckelstärke / clamping-range until 15 mm cover-thickness Ausführungen für andere Deckelstärken auf Anfrage / Version for other cover-thicknesses on request) Ausführung Aluminium / Version aluminium Ausführung Edelstahl / Version stainless-steel	V 44 220 07 000 V 44 220 07 003
② 7.2	O-Ring / Seal Ausführung/Version Perbunan Ausführung/Version Viton	V 09 102 60 000 V 09 102 60 001
7.3	Sechskantmutter / Hexagon-nut Ausführung Messing / Version brass Ausführung Edelstahl / Version stainless-steel	V 44 220 06 000 V 44 220 06 003
	Ersatzteile für WALTHER-PILOT-Rührwerke sind auf separaten Datenblättern aufgeführt! Replacement-parts for WALTHER-PILOT-Agitators are listed on seperate data-record-sheets!	
8	Steigrohr / Suction-tube für Behältertyp / for vessel-type MDG 8 für Behältertyp / for vessel-type MDG 12 für Behältertyp / for vessel-type MDG 22 für Behältertyp / for vessel-type MDG 24 für Behältertyp / for vessel-type MDG 45 für Behältertyp / for vessel-type MDG 60 für Behältertyp / for vessel-type MDG 90 für Behältertyp / for vessel-type MDG 120 für Behältertyp / for vessel-type MDG 250 für Behältertyp / for vessel-type MDG 500	V 44 220 09 233 V 44 220 09 243 V 44 220 09 253 V 44 220 09 263 V 44 220 09 273 V 44 220 09 283 V 44 220 09 293 V 44 220 09 303 V 44 220 09 313 V 44 220 09 333
9	Kontermutter / Lock-nut Ausführung Messing / Version brass Ausführung Edelstahl / Version stainless-steel	V 44 220 09 174 V 44 220 09 173
10	Materialentnahmekugelhahn kompl. / Material-outlet-ball-valve Aussengewinde-Anschluss / External-thread G3/8" DN10 Messing / brass Aussengewinde-Anschluss / External-thread G3/8" DN10 Edelstahl / stainless-steel Innengewinde-Anschluss / Internal-thread G1/2" DN13 Messing / brass Innengewinde-Anschluss / Internal-thread G1/2" DN13 Edelstahl / stainless-steel	V 44 220 09 105 V 44 220 09 103 V 44 220 09 125 V 44 220 09 123
② 11	O-Ring / Seal Ausführung/Version Perbunan Ausführung/Version Viton Bei der Behälterversionen mit unterem Materialauslaß wird die Deckelbohrung für das Steigrohr mit den nachfolgenden Einzelteilen verschlossen! Vessel-version with material-outlet at the bottom: The following parts are used to seal the Suction-tube trough-bore in the cover-plate Blindstopfen Ausführung Alu / Blind-plug version aluminium Blindstopfen Ausführung Edelstahl / Blind-plug version stainless-steel O-Ring / Seal Version Perbunan O-Ring / Seal Version Viton Kontermutter Ausführung verzinkt / Lock-nut version galvanized Kontermutter Ausführung Edelstahl / Lock-nut version stainless-steel	V 09 102 16 000 V 09 102 16 101 V 44 220 09 180 V 44 220 09 183 V 09 102 16 000 V 09 102 16 101 V 44 220 09 174 V 44 220 09 173
12	Kugelhahn / Ball-valve (für unteren Materialauslaß / for material-outlet at the bottom) Behältertyp / Vessel-type MDG 8 verzinkt / galvanized (3/8" / brass-nickel-plated) Behältertyp / Vessel-type MDG 8 Edelstahl / stainless steel (3/8") Behältertyp / Vessel-type MDG 12 – MDG 500 verzinkt / galvanized (1" / brass-nickel-plated) Behältertyp / Vessel-type MDG 12 – MDG 500 Edelstahl / stainless steel (1")	V 03 200 00 385 V 03 200 00 383 V 15 702 57 252 V 03 200 00 103
13	Aufkleber Warnhinweise / Label warning notices	AUFKLMDG001
14	Aufkleber Hinweise Sterngriffe/O-Ringe / Label notices star-grip/o-ring	AUFKLMDG002
①	alternative Dichtungswerkstoffe sind in der Zubehörliste aufgeführt / alternative seal-materials are listed in the accessories-table	
②	Verschleisssteile / wear-parts	
③	Die Armaturenausführung ist entsprechend dem max. zulässigen Betriebsdruck des Behälters auszuwählen! The armature version is to be selected according to the max. allowable working pressure of the vessel.	

Ersatzteilliste Drucklufteinlassarmatur
Replacement-parts-list Air-inlet-mounting


Drucklufteinlassarmatur Einfachregler /
Air-inlet-mounting single regulator

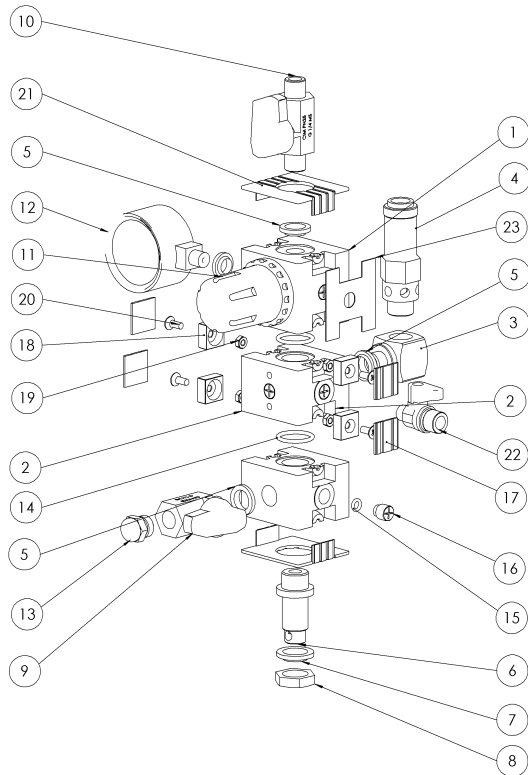


Drucklufteinlassarmatur ohne Regler /
Air-inlet-mounting without regulator

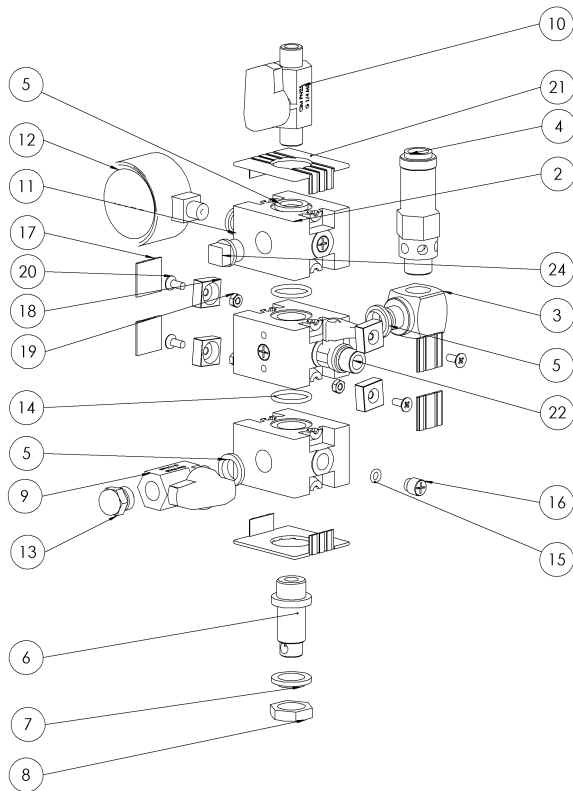

Drucklufteinlassarmatur mit 2.-(& 3.-)Regler /
Air-inlet-mounting with 2.-(& 3.-)regulator

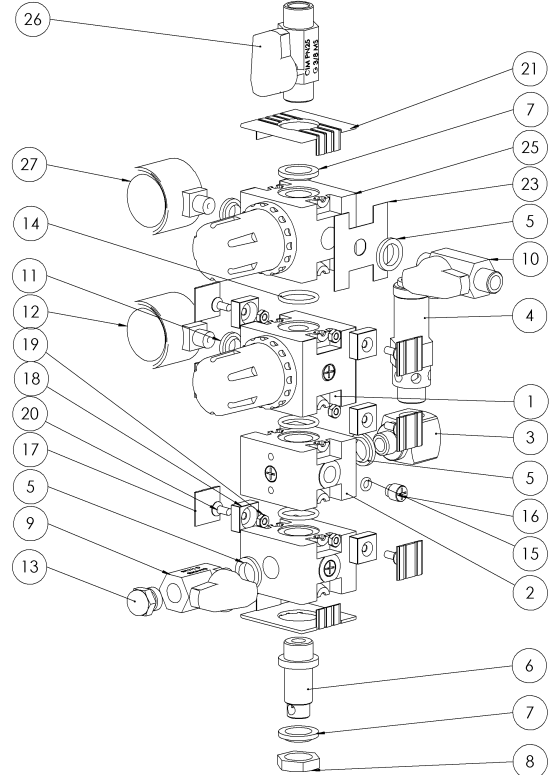

Drucklufteinlassarmatur mit Präzisionsregler /
Air-inlet-mounting with precision-regulator

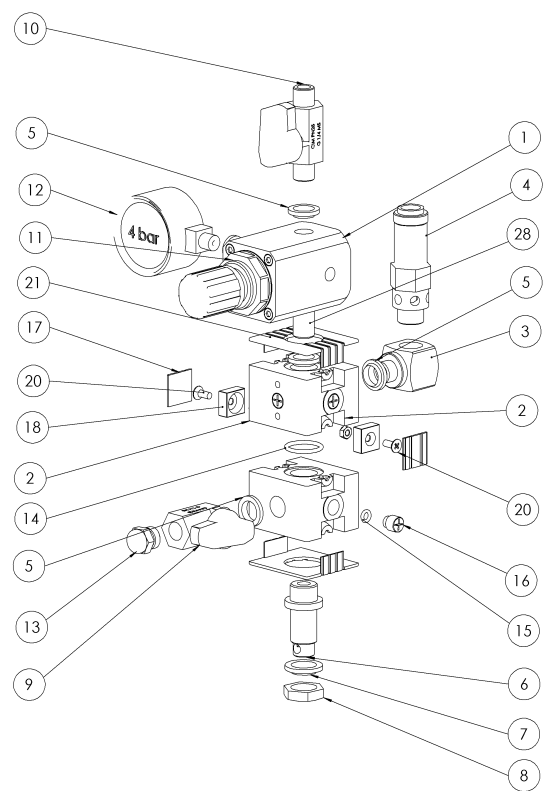

Pos./ Item	Bezeichnung/ Description	Artikelnummer/ Ident-No.
1	Druckregler (für Behälter) / Air-regulator (for vessel) Standarddruckregler / Standard-air-regulator (Regelbereich / Adjustment-range 0,5 – 8,0 bar) Standarddruckregler / Standard-air-regulator (Regelbereich / Adjustment-range 0,5 – 15,0 bar) Präzisionsdruckregler / Precisions-regulator (Regelbereich / Adjustment-range 0,1 – 4,0 bar) Reparatursatz f. Druckregler / Repairing-set for pressure-regulator V 35 400 00 000 Reparatursatz f. Druckregler / Repairing-set for pressure-regulator V 35 400 00 000 <u>Viton</u> Reparatursatz f. Druckregler / Repairing-set for pressure-regulator V 35 401 00 000	V 35 400 00 000 V 35 401 00 000 V 35 408 00 000 V 35 400 00 003 V 35 400 00 013 V 35 401 00 003
2	Zwischenblock / Distributor-block (2 Stck./2 pcs.)	V 35 400 00 001
3	Aufnahme Sicherheitsventil / Adapter safety-valve M16x1,5	V 35 400 00 104
4	Sicherheitsventil bauteilgeprüft / Safety-valve type-approved 1) Messing / brass; Anschluss/Connection M16x1,5; D/G; DN8 Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 6,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 10,0 bar	V 11 001 60 154 V 11 001 60 204 V 11 001 60 304 V 11 001 60 404 V 11 001 60 454 V 11 001 60 604 V 11 001 61 004
5	Dichtung / Seal 1/4"	V 09 001 54 000
6	Behälteranschlussnippel / Vessel-connection-nipple Ausführung Messing / Version brass Ausführung Edelstahl / Version stainless-steel	V 35 400 00 114 V 35 400 00 113
7	Dichtung / Seal M16	V 09 001 55 001
8	Kontermutter / Lock-nut Ausführung Messing / Version brass Ausführung Edelstahl / Version stainless-steel	V 35 400 00 124 V 35 400 00 123
9	Kugelhahn / Ball-valve 1/4"	V 03 200 20 009
10	Kugelhahn / Ball-valve 1/4"	V 03 200 20 000
11	Dichtung / Seal 1/8"	V 09 001 57 000
12	Manometer (Behälter) für Armatur mit Einfachregler & Armatur ohne Regler / Pressure-gauge (vessel) for single-regulator-mounting & for mounting without regulator Ø 50 mm, Anschluss/Connection 1/8" 1) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+1,5 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+2,0 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+3,0 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+4,0 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+4,5 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 5,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+5,0 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 6,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: -1/+6,0 bar 2) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 8,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 10,0 bar Ausführung für <u>Präzisionsdruckregler</u> / Version for <u>precision-regulator</u> Manometer (Behälter) für Armatur mit 2.-(& 3.-)Regler / Pressure-gauge (vessel) for mounting with 2.-(& 3.-)regulator Ø 40 mm, Anschluss/Connection 1/8" 1) Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 1,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 2,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 3,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,0 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 4,5 bar Ausführung für Behälter-Betriebsdruck / Version for vessel working pressure: 6,0 bar	V 12 150 06 154 V 12 150 05 004 V 12 150 06 204 V 12 150 05 004 V 12 150 04 304 V 12 150 05 004 V 12 150 06 404 V 12 150 09 004 V 12 150 10 454 V 12 150 09 004 V 12 150 10 504 V 12 150 09 004 V 12 150 10 604 V 12 150 09 004 V 12 150 16 004 V 12 150 16 104 V 12 150 04 004 V 12 140 06 004 V 12 140 06 004 V 12 140 04 304 V 12 140 06 404 V 12 140 06 454 V 12 140 10 604
13	Schalldämpfer / Silencer	V 35 400 00 134
14	O-Ring	V 35 400 10 102
15	O-Ring	V 35 400 00 005
16	Verschluss-Stopfen / Plug	V 35 400 00 004
17-20	Verbindungsbausatz / Connection-kit	V 35 400 00 002
21	Abdeckplatte / Cover-plate	V 35 400 10 001
22	Kugelhahn / Ball-valve 1/8"	V 35 450 00 115


Pos./ Item	Bezeichnung/ Description	Artikelnummer/ Ident-No.
23	Abdeckplatte Seite / Cover-plate lateral ohne Beschriftung / without labeling mit Beschriftung f. Druckregler / with labeling for regulator V 35 400 00 000 mit Beschriftung f. Druckregler / with labeling for regulator V 35 401 00 000 mit Beschriftung f. Druckregler / with labeling for regulator V 35 402 00 000	V 35 400 10 002 V 35 400 10 003 V 35 401 10 001 V 35 402 10 001
24	Verschluss-Stopfen / Plug	V 35 400 00 006
25	Druckregler (für 2. & 3. Verbraucher) / Air-regulator (for 2. & 3. load) Reparatursatz f. Druckregler / Repairing-set for pressure-regulator V 35 402 00 000	V 35 402 00 000 V 35 400 00 003
26	Kugelhahn / Ball-valve für Armatur mit 2.-Regler / for mounting with 2.-regulator für Armatur mit 2.- & 3.-Regler / for mounting with 2.- & 3.-regulator	V 03 200 00 000 V 03 200 50 000
26.1	Doppelnippel für Kugelhahn Pos. 26 / double-nipple for ball-valve Pos. 26 nur für Armatur mit 2.- & 3.-Regler! / for mounting with 2.- & 3.-regulator only! (ohne Abbildung / without illustration) / wird 2x benötigt / twice-needed	V 00 101 07 000
27	Manometer f. 2.-(& 3.-)Regler / Pressure-gauge for 2.-(& 3.-)regulator Ø 40 mm, Anschluss/Connection 1/8"	V 12 140 06 004
28	Gewindenippel / Threaded-nipple	V 44 220 05 001

Bemerkungen / Remarks:

- Die Armaturenausführung ist entsprechend dem max. zulässigen Betriebsdruck des Behälters auszuwählen/
The armature version is to be selected according to the max. allowable working pressure of the vessel.
- Der max. zulässige Betriebsdruck des Behälters ist auf der Manometerskala mit einem roten Marker zu kennzeichnen/
The max. allowable working pressure of the vessel is to be marked on the pressure gauge scale by a red marker

Montage des Reparatursatzes f. Druckregler 35-400, 35-401, 35-402 & 35-403

Installation of the repairing-set for pressure-regulator

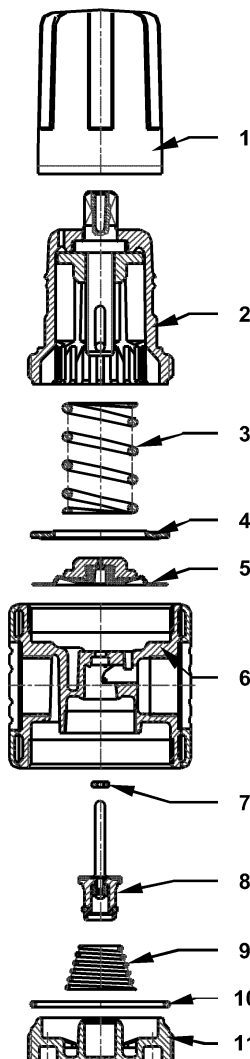

Zerlegen des Oberteiles

- Ziehen Sie den Einstellknopf ① nach oben, drehen Sie ihn gegen den Uhrzeigersinn bis zum Anschlag und verriegeln Sie ihn wieder
- Schrauben Sie das Oberteil ② ab
- Entnehmen Sie die Regelfeder ③
- Nehmen Sie die weiße Distanzscheibe ④ und die Membraneinheit ⑤ aus dem Gehäuse

Zerlegen des Unterteiles

- Schrauben Sie den Bodendeckel mittels eines Zapfenschlüssels ab.
- Ziehen Sie den Ventilkolben ⑧ aus dem Gehäuse
- Nehmen Sie die O-Ringe ⑦ & ⑩ aus dem Gehäuse

Zusammenbau des Gerätes

Der Zusammenbau des Gerätes erfolgt in umgekehrter Reihenfolge mit den neuen Teilen. Beim Zusammenbau des Gerätes werden zuerst die Teile des Unterteils in das Gehäuse eingebaut. Erst nach dem Zusammenbau des Unterteils wird das Oberteil wieder zusammengebaut.

Hinweis zum Zusammenbau des Oberteils

- Schrauben Sie das Oberteil 1 - 2 Umdrehungen in das Gehäuse.
- Entriegeln Sie den Einstellknopf, halten Sie den Oberteil mit einer Hand und drehen Sie den Einstellknopf 3 - 4 Umdrehungen nach Rechts: dadurch wird die Membrane zum Ventilkolben zentriert
- Drehen Sie den Einstellknopf wieder nach links und verriegeln ihn
- Schrauben Sie den Oberteil bis auf Anschlag fest

Dismantle the top-part

- Pull the handwheel ① upwards, turn it anticlockwise to the stop and push it down again to lock it.
- Screw off the top-part ②
- Remove the regulation-spring ③
- Remove the white spacer-disc ④ and the diaphragm-assembly ⑤ from the housing

dismantle the base-part

- Screw off the bottom cover with a pin spanner
- Pull the valve piston ⑧ out of the housing
- Take the O-ring ⑦ & ⑩ out of the housing

Reassembly

Reassembly of the unit is carried out in reverse order to dismantling using the spares: Lower part first, upper part last.

Note on reassembly of the top-part

- Screw the upper part 1 to 2 turns into the housing.
- Unlock the handwheel, hold the upper part with one hand and turn the handwheel 3 - 4 turns to the right: this centres the diaphragm to the valve piston.
- Turn the handwheel back to the left and lock it.
- Screw the upper part in tight up to its stop.

Zubehör Materialdruckgefäße Typenreihe MDG (optional)

Accessories material-pressure-vessel type MDG (optionally)

Bezeichnung/ Description	Artikelnummer/ Ident-No.
Deckeldichtung (alternative Dichtungswerkstoffe) / Cover-seal (alternative seal-materials)	
Behältertyp / Vessel-type MDG 8 Version EPDM	V 09 110 01 002
Behältertyp / Vessel-type MDG 8 Version FEP	V 09 110 01 004
Behältertyp / Vessel-type MDG 12 + 24 EPDM	V 09 102 59 002
Behältertyp / Vessel-type MDG 12 + 24 FEP	V 09 102 59 004
Behältertyp / Vessel-type MDG 22 EPDM	V 09 103 32 002
Behältertyp / Vessel-type MDG 22 FEP	V 09 103 32 004
Behältertyp / Vessel-type MDG 45 - 500 EPDM	V 09 102 62 002
Behältertyp / Vessel-type MDG 45 - 500 FEP	V 09 102 62 004
Dichtung für Einfüllverschluß NW 55 / Seal for filling-port-closure NW 55	
O-Ring Ausführung/Version EPDM	V 09 102 61 002
O-Ring Ausführung/Version FEP	V 09 102 61 004
Einfülltrichter (Überfüllsicherung) Alu / Funnel-tube (overfilling-protection) aluminium	V 44 220 64 000
Nachrüstsatz für 2.-Regler an der Drucklufteinlassarmatur kpl. / Add-on kit for 2. regulator at the air-inlet-mounting compl.	
Regelbereich / Adjustment-range: 0,5 - 8,0 bar	
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 1,5 bar	V 35 402 00 150
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 2,0 bar	V 35 402 00 200
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 3,0 bar	V 35 402 00 300
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar	V 35 402 00 400
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,5 bar	V 35 402 00 450
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 6,0 bar	V 35 402 00 600
Nachrüstsatz Luftverteiler an der Drucklufteinlassarmatur kpl. / Add-on kit air-distributor at the air-inlet-mounting compl.	
Nennndruck / Nominal-pressure: 16,0 bar	V 35 400 00 007
Drucklufteinlassarmatur ohne Regler kpl. / Air-inlet-mounting without regulator compl.	
Behälteranschluss Edelstahl / Vessel-connection stainless-steel	
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 1,5 bar	V 35 405 00 153
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 2,0 bar	V 35 405 00 203
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 3,0 bar	V 35 405 00 303
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,0 bar	V 35 405 00 403
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 4,5 bar	V 35 405 00 453
Ausführung für Behälter-Betriebsdruck / Version for vessel-working-pressure: 6,0 bar	V 35 405 00 603
Materialverteilerblock / Material-distributor-block	
Edelstahl / stainless-steel	
zum Anschluss von 2 Mat.-Entnahmehähnen / for connection of 2 material-outlett-ball-valves	V 44 220 09 143
zum Anschluss von 3 Mat.-Entnahmehähnen / for connection of 3 material-outlett-ball-valves	V 44 220 09 153
Ansaugsieb kompl. mit Befest.-Material / Suction-sieve compl.	
Kunststoff/Edelstahl / plastics/stainless-steel	
Maschenweite / mesh-width 1,0mm	V 44 220 09 520
Maschenweite / mesh-width 1,8mm	V 44 220 09 530
Einsatzzeimer / Bucket	
Behältertyp / Vessel-type MDG 8 verzinkt / galvanized Inhalt / Capacity 4,9 Ltr.	V 43 000 80 002
Behältertyp / Vessel-type MDG 8 Edelstahl / stainless-steel Inhalt / Capacity 4,9 Ltr.	V 43 000 80 003
Behältertyp / Vessel-type MDG 12 verzinkt / galvanized Inhalt / Capacity 7,9 Ltr.	V 43 001 20 002
Behältertyp / Vessel-type MDG 12 Edelstahl / stainless-steel Inhalt / Capacity 7,9 Ltr.	V 43 001 20 003
Behältertyp / Vessel-type MDG 22 verzinkt / galvanized Inhalt / Capacity 14,6 Ltr.	V 43 002 20 002
Behältertyp / Vessel-type MDG 22 Edelstahl / stainless-steel Inhalt / Capacity 14,6 Ltr.	V 43 002 20 003
Behältertyp / Vessel-type MDG 24 verzinkt / galvanized Inhalt / Capacity 18,0 Ltr.	V 43 002 40 002
Behältertyp / Vessel-type MDG 24 Edelstahl / stainless-steel Inhalt / Capacity 18,0 Ltr.	V 43 002 40 003
Behältertyp / Vessel-type MDG 45 verzinkt / galvanized Inhalt / Capacity 31,8 Ltr.	V 43 004 50 002
Behältertyp / Vessel-type MDG 45 Edelstahl / stainless-steel Inhalt / Capacity 31,8 Ltr.	V 43 004 50 003
Behältertyp / Vessel-type MDG 60 verzinkt / galvanized Inhalt / Capacity 45,5 Ltr.	V 43 006 00 002
Behältertyp / Vessel-type MDG 60 Edelstahl / stainless-steel Inhalt / Capacity 45,5 Ltr.	V 43 006 00 003
Behältertyp / Vessel-type MDG 90 verzinkt / galvanized Inhalt / Capacity 51,9 Ltr.	V 43 009 00 002
Behältertyp / Vessel-type MDG 90 Edelstahl / stainless-steel Inhalt / Capacity 51,9 Ltr.	V 43 009 00 003
Behältertyp / Vessel-type MDG 120 verzinkt / galvanized Inhalt / Capacity 70,1 Ltr.	V 43 012 00 002
Behältertyp / Vessel-type MDG 120 Edelstahl / stainless-steel Inhalt / Capacity 70,1 Ltr.	V 43 012 00 003
Behälter-Fahrgestell (Stahl verzinkt) / Vessel-cart (steel-galvanized)	
Behältertyp / Vessel-type MDG 12 & MDG 24	V 43 102 40 000
Behältertyp / Vessel-type MDG 22	V 43 102 20 000
Behältertyp / Vessel-type MDG 45 & MDG 60	V 43 104 50 000
Behältertyp / Vessel-type MDG 90 & MDG 120	V 43 109 00 000

Rührwerke für Materialdruckgefäße Typenreihe MDG (optional)

Agitators for material-pressure-vessel type MDG (optionally)

Bezeichnung/ Description	Artikelnummer/ Ident-No.
Handrührwerk / Manual-agitator	
Behältertyp / Vessel-type MDG 8 Ausf. verzinkt / Version galvanized	V 44 220 30 082
Behältertyp / Vessel-type MDG 8 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 083
Behältertyp / Vessel-type MDG 12 Ausf. verzinkt / Version galvanized	V 44 220 30 122
Behältertyp / Vessel-type MDG 12 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 123
Behältertyp / Vessel-type MDG 22 Ausf. verzinkt / Version galvanized	V 44 220 30 222
Behältertyp / Vessel-type MDG 22 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 223
Behältertyp / Vessel-type MDG 24 Ausf. verzinkt / Version galvanized	V 44 220 30 242
Behältertyp / Vessel-type MDG 24 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 243
Behältertyp / Vessel-type MDG 45 Ausf. verzinkt / Version galvanized	V 44 220 30 452
Behältertyp / Vessel-type MDG 45 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 453
Behältertyp / Vessel-type MDG 60 Ausf. verzinkt / Version galvanized	V 44 220 30 602
Behältertyp / Vessel-type MDG 60 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 603
Behältertyp / Vessel-type MDG 90 Ausf. verzinkt / Version galvanized	V 44 220 30 902
Behältertyp / Vessel-type MDG 90 Ausf. Edelstahl / Version stainless-steel	V 44 220 30 903
Behältertyp / Vessel-type MDG 120 Ausf. verzinkt / Version galvanized	V 44 220 31 202
Behältertyp / Vessel-type MDG 120 Ausf. Edelstahl / Version stainless-steel	V 44 220 31 203
Behältertyp / Vessel-type MDG 250 Ausf. verzinkt / Version galvanized	V 44 220 32 502
Behältertyp / Vessel-type MDG 250 Ausf. Edelstahl / Version stainless-steel	V 44 220 32 503
Druckluftgetrieberrührwerk ölfrei ex-geschützt / Pneumatic-agitator non lubricated ex-proved	
Leistung/Performance: 0,36 kW, max. 200 1/min.	
Ex-Kennzeichnung/-Designation: II 1/2 G c T4 X	
Bei Bedarf an ölgeschmierten Rührwerken sprechen Sie bitte unsere Vertriebsabteilung an / If oil-lubricated agitators are required, please contact our selling-department	
Behältertyp / Vessel-type MDG 8 Ausf. verzinkt / Version galvanized	V 44 220 40 082
Behältertyp / Vessel-type MDG 8 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 083
Behältertyp / Vessel-type MDG 12 Ausf. verzinkt / Version galvanized	V 44 220 40 122
Behältertyp / Vessel-type MDG 12 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 123
Behältertyp / Vessel-type MDG 22 Ausf. verzinkt / Version galvanized	V 44 220 40 222
Behältertyp / Vessel-type MDG 22 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 223
Behältertyp / Vessel-type MDG 24 Ausf. verzinkt / Version galvanized	V 44 220 40 242
Behältertyp / Vessel-type MDG 24 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 243
Behältertyp / Vessel-type MDG 45 Ausf. verzinkt / Version galvanized	V 44 220 40 452
Behältertyp / Vessel-type MDG 45 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 453
Behältertyp / Vessel-type MDG 60 Ausf. verzinkt / Version galvanized	V 44 220 40 602
Behältertyp / Vessel-type MDG 60 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 603
Behältertyp / Vessel-type MDG 90 Ausf. verzinkt / Version galvanized	V 44 220 40 902
Behältertyp / Vessel-type MDG 90 Ausf. Edelstahl / Version stainless-steel	V 44 220 40 903
Behältertyp / Vessel-type MDG 120 Ausf. verzinkt / Version galvanized	V 44 220 41 202
Behältertyp / Vessel-type MDG 120 Ausf. Edelstahl / Version stainless-steel	V 44 220 41 203
Behältertyp / Vessel-type MDG 250 Ausf. verzinkt / Version galvanized	V 44 220 42 502
Behältertyp / Vessel-type MDG 250 Ausf. Edelstahl / Version stainless-steel	V 44 220 42 503
Elektrogetrieberrührwerk ex-geschützt / Electric-agitator ex-proved	
Leistung/Performance: 0,12 kW, 60 1/min. (MDG 8 - MDG 90) / 0,18 kW, 100 1/min. (MDG 120 - MDG 500)	
Ex-Kennzeichnung/-Designation: II 1/2 G c T3 X (Motor: II 2 G EEEx II T3 & II 2 G c T3 X)	
Andere Leistungen und Drehzahlen auf Anfrage / other performances and output-speeds on request	
Behältertyp / Vessel-type MDG 8 Ausf. verzinkt / Version galvanized	V 44 220 50 082
Behältertyp / Vessel-type MDG 8 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 083
Behältertyp / Vessel-type MDG 12 Ausf. verzinkt / Version galvanized	V 44 220 50 122
Behältertyp / Vessel-type MDG 12 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 123
Behältertyp / Vessel-type MDG 22 Ausf. verzinkt / Version galvanized	V 44 220 50 222
Behältertyp / Vessel-type MDG 22 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 223
Behältertyp / Vessel-type MDG 24 Ausf. verzinkt / Version galvanized	V 44 220 50 242
Behältertyp / Vessel-type MDG 24 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 243
Behältertyp / Vessel-type MDG 45 Ausf. verzinkt / Version galvanized	V 44 220 50 452
Behältertyp / Vessel-type MDG 45 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 453
Behältertyp / Vessel-type MDG 60 Ausf. verzinkt / Version galvanized	V 44 220 50 602
Behältertyp / Vessel-type MDG 60 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 603
Behältertyp / Vessel-type MDG 90 Ausf. verzinkt / Version galvanized	V 44 220 50 902
Behältertyp / Vessel-type MDG 90 Ausf. Edelstahl / Version stainless-steel	V 44 220 50 903
Behältertyp / Vessel-type MDG 120 Ausf. verzinkt / Version galvanized	V 44 220 51 202
Behältertyp / Vessel-type MDG 120 Ausf. Edelstahl / Version stainless-steel	V 44 220 51 203
Behältertyp / Vessel-type MDG 250 Ausf. verzinkt / Version galvanized	V 44 220 52 502
Behältertyp / Vessel-type MDG 250 Ausf. Edelstahl / Version stainless-steel	V 44 220 52 503
Behältertyp / Vessel-type MDG 500 Ausf. verzinkt / Version galvanized	V 44 220 55 002
Behältertyp / Vessel-type MDG 500 Ausf. Edelstahl / Version stainless-steel	V 44 220 55 003

Schläuche & Schlauchzubehör

Hoses & hose-accessories

Bezeichnung/ Description	Artikelnummer/ Ident-No.
<u>für Luftanschluss / for air-connection 1/4":</u>	
Druckluftschlauch elektrisch leitfähig / Compressed-air-hose electroconductive	
Meterware (ohne Anschlüsse) / cut-goods (without connections)	V 20 008 30 144
mit Anschlüssen / with connections: G1/4" Länge / length: 2,0 mtr.	V 20 008 30 204
mit Anschlüssen / with connections: G1/4" Länge / length: 5,0 mtr.	V 20 008 30 504
mit Anschlüssen / with connections: G1/4" Länge / length: 7,5 mtr.	V 20 008 30 754
Schlauchzubehör / Hose-accessories	
Schlauchanschluß Messing / Hose-connection brass 8 mm	V 00 101 02 000
Überwurfmutter vernickelt für dto. / Cap-nut nickel-plated 1/4"	V 00 101 03 000
Winkeltülle mit Überwurfmutter vernickelt / Elbow-hose-connection nickel-plated 1/4" 9 mm	V 00 101 49 000
Schlauchklemme für dto. / hose-clip 13/15	V 70 131 50 000
Schnellverschlusskupplungen / Self-sealing-coupling	
Stecknippel Messing Innengewinde / Plug-nipple brass internal-thread 1/4"	V 75 021 21 144
Verschlußkupplung Messing Innengewinde / Coupling brass internal-thread 1/4"	V 75 020 21 144
Verschlußkupplung Messing Aussengewinde / Coupling brass external-thread 1/4"	V 75 020 11 144
Verschlußkupplung Messing Schlauchanschluss / Coupling brass hose-connection 8 mm	V 75 020 35 094
<u>für Luftanschluss / for air-connection 3/8" (bei 2. Regler/ by 2-regulator):</u>	
Druckluftschlauch elektrisch leitfähig / Compressed-air-hose electroconductive	
Meterware (ohne Anschlüsse) / cut-goods (without connections)	V 20 008 30 144
mit Anschlüssen / with connections: G3/8" Länge / length: 2,0 mtr.	V
mit Anschlüssen / with connections: G3/8" Länge / length: 5,0 mtr.	V
mit Anschlüssen / with connections: G3/8" Länge / length: 7,5 mtr.	V
Schlauchzubehör / Hose-accessories	
Schlauchanschluß Messing / Hose-connection brass	V 00 101 81 094
Überwurfmutter vernickelt für dto. / Cap-nut nickel-plated 3/8"	V 00 101 12 005
Schlauchklemme für dto. / hose-clip	V 70 131 50 000
Schnellverschlusskupplungen / Self-sealing-coupling	
Stecknippel verzinkt Innengewinde / Plug-nipple galvanized internal-thread 3/8"	V 71 021 22 382
Verschlußkupplung verzinkt Innengewinde / Coupling galvanized internal-thread 3/8"	V 71 020 22 382
Verschlußkupplung verzinkt Aussengewinde / Coupling galvanized external-thread 3/8"	V 71 020 12 382

Bezeichnung/ Description	Artikelnummer/ Ident-No.
<u>für Materialanschluss / for material-connection 3/8":</u>	
Materialschlauch 8 mm innen – 8 x 3,5 grün / Material-hose 8 mm inside	V 20 009 35 644
Schlauchanschluß MS 8 mm für dto. / hose-connection brass 8 mm	V 00 101 81 094
Schlauchanschluß Edelstahl 8 mm für dto. / hose-connection stainless-steel 8 mm	V 00 101 81 093
Überwurfmutter 3/8" für dto. / cap-nut 3/8"	V 00 101 12 005
Schlauchklemme 13/15 für dto. / hose-clip 13/15	V 70 131 50 000
Materialschlauch 6 mm innen – FEP / Material-hose 6 mm inside	V 20 006 32 100
Schlauchanschluß MS 6 mm für dto. / hose-connection 6 mm brass	V 00 101 88 004
Schlauchanschluß Edelstahl 6 mm für dto. / hose-connection 6 mm stainless-steel	V 00 101 88 003
Überwurfmutter 3/8" für dto. / cap-nut 3/8"	V 00 101 12 005
Schlauchklemme 11/13 für dto. / hose-clip 11/13	V 70 111 30 000
Kleberschlauch 8 mm innen – Synflex / Adhesive-hose 8 mm inside	V 08 041 00 010
Schlauchanschluß MS 8 mm für dto. / hose-connection brass 8 mm	V 00 101 81 094
Schlauchanschluß Edelstahl 8 mm für dto. / hose-connection stainless-steel 8 mm	V 00 101 81 093
Überwurfmutter 3/8" für dto. / cap-nut 3/8"	V 00 101 12 005
Schlauchklemme 9/11 für dto. / hose-clip 9/11	V 70 091 10 000
<u>für Materialanschluss / for material-connection 1/4":</u>	
Materialschlauch 8 mm innen – 8 x 3,5 grün / Material-hose 8 mm inside	V 20 009 35 644
Schlauchanschluß Edelstahl 8 mm für dto. / hose-connection stainless-steel 8 mm	V 00 101 02 003
Schlauchanschluß Messing 8 mm für dto. / hose-connection brass 8 mm	V 00 101 02 000
Überwurfmutter 1/4" für dto. / cap-nut 1/4"	V 00 101 03 000
Schlauchklemme 13/15 für dto. / hose-clip 13/15	V 70 131 50 000
Materialschlauch 6 mm innen – FEP / Material-hose 6 mm inside	V 20 006 32 100
Schlauchanschluß Edelstahl 6 mm für dto. / hose-connection stainless-steel 6 mm	V 00 101 63 003
Überwurfmutter 1/4" für dto. / cap-nut 1/4"	V 00 101 03 000
Schlauchklemme 11/13 für dto. / hose-clip 11/13	V 70 111 30 000
Kleberschlauch 8 mm innen – Synflex / Adhesive-hose 8 mm inside	V 08 041 00 010
Schlauchanschluß Edelstahl 8 mm für dto. / hose-connection stainless steel 8 mm	V 00 101 02 003
Schlauchanschluß Messing 8 mm für dto. / hose-connection brass 8 mm	V 00 101 02 000
Überwurfmutter 1/4" für dto. / cap-nut 1/4"	V 00 101 03 000
Schlauchklemme 9/11 für dto. / hose-clip 9/11	V 70 091 10 000